


## FX 3000-IV: I/O-board with 24V Power supply

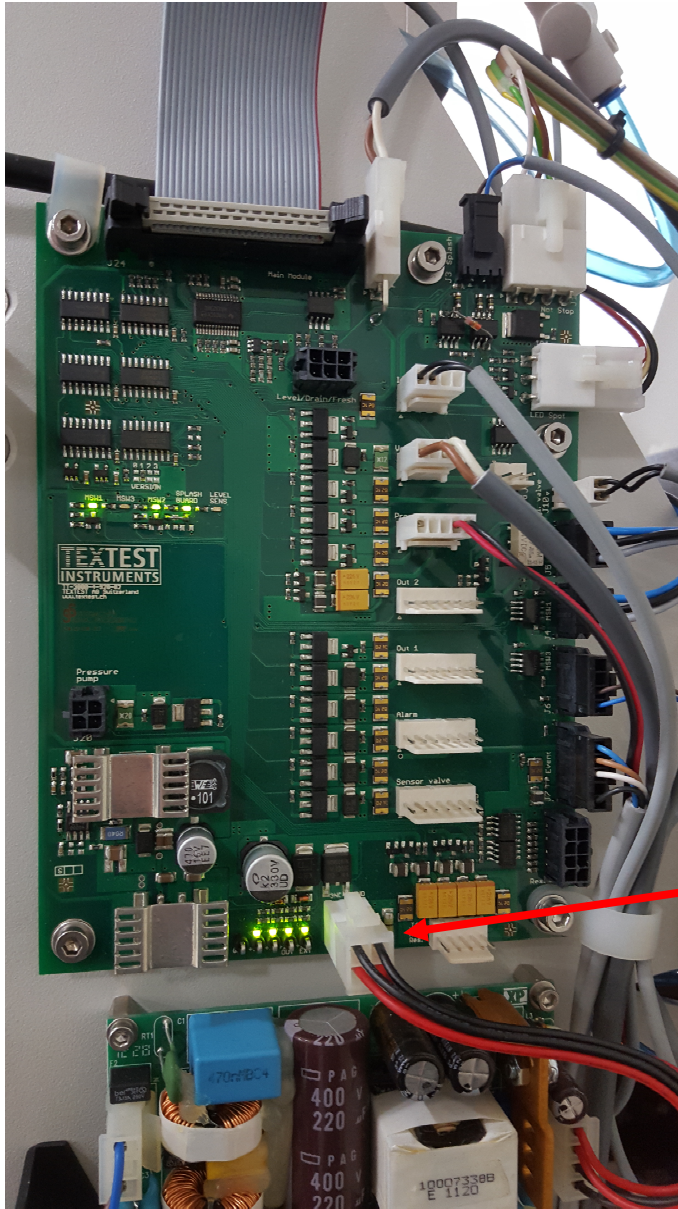

Disconnect this connector and check, whether you have 24V on this connector (black wire = GND, red wire = +24V)