


Replacing the FX 3000-IV O-Ring

Lower Ring: remove the two lower o-rings with a small screwdriver and replace them by pressing in the new ones. (Pressing in the o-rings can be quite hard.)



Upper ring: unscrew the upper ring from the upper test head, 4 screws.

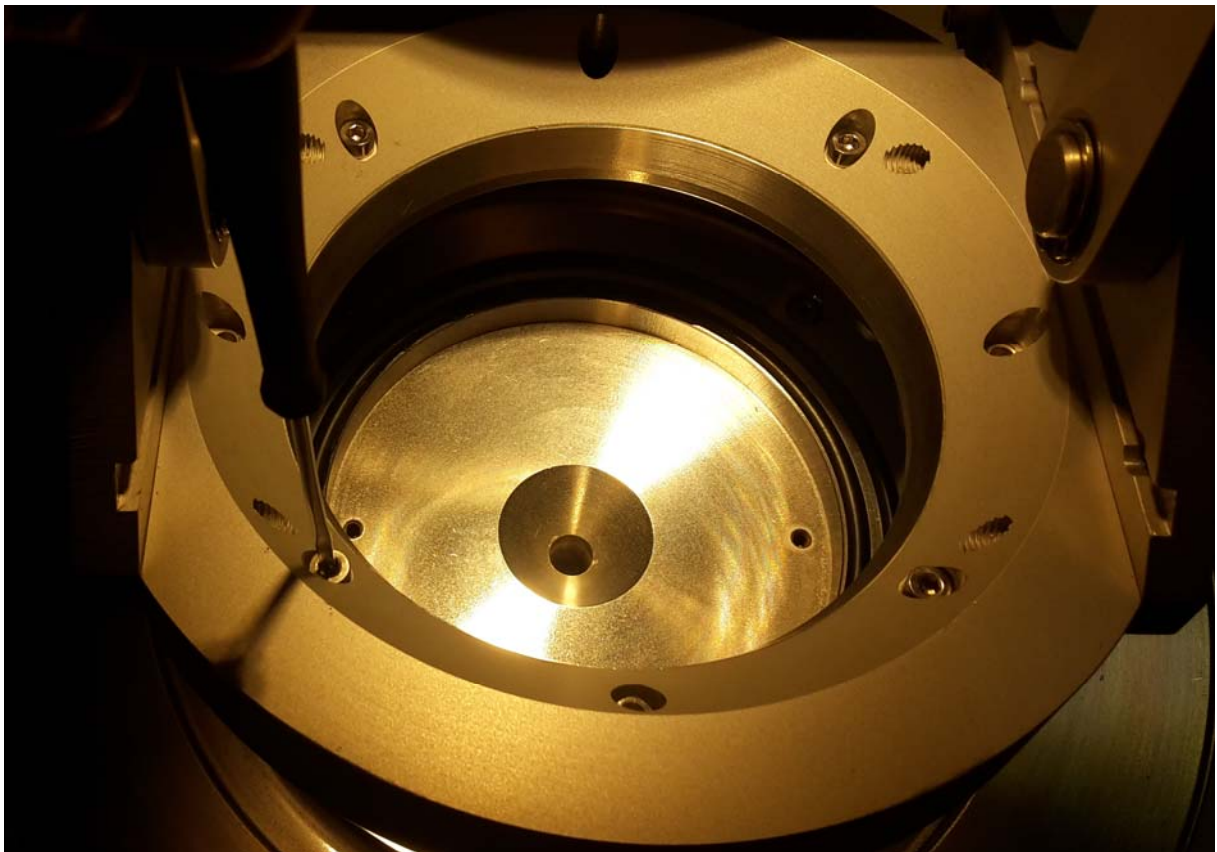

Replacing the FX 3000-IV O-Ring

Replace the o-ring from the upper ring as described for the lower ring and reassemble the upper test head.

