


3000-IV: Check micro switch


- Open Instrument (see open instrument pdf)
- With test head open manually activate the two micro switches individually (view from the top)
- Check on I/O pcb if the LED's switch on and off whilst pressing and releasing the micro switches.
- Note if one of the two LED's do not switch on and off
- (Switch is defect) order new one from Textest AG.
- If the switches are ok the height needs to be adjusted.
(Contact Textest for instructions)

Micro Switches

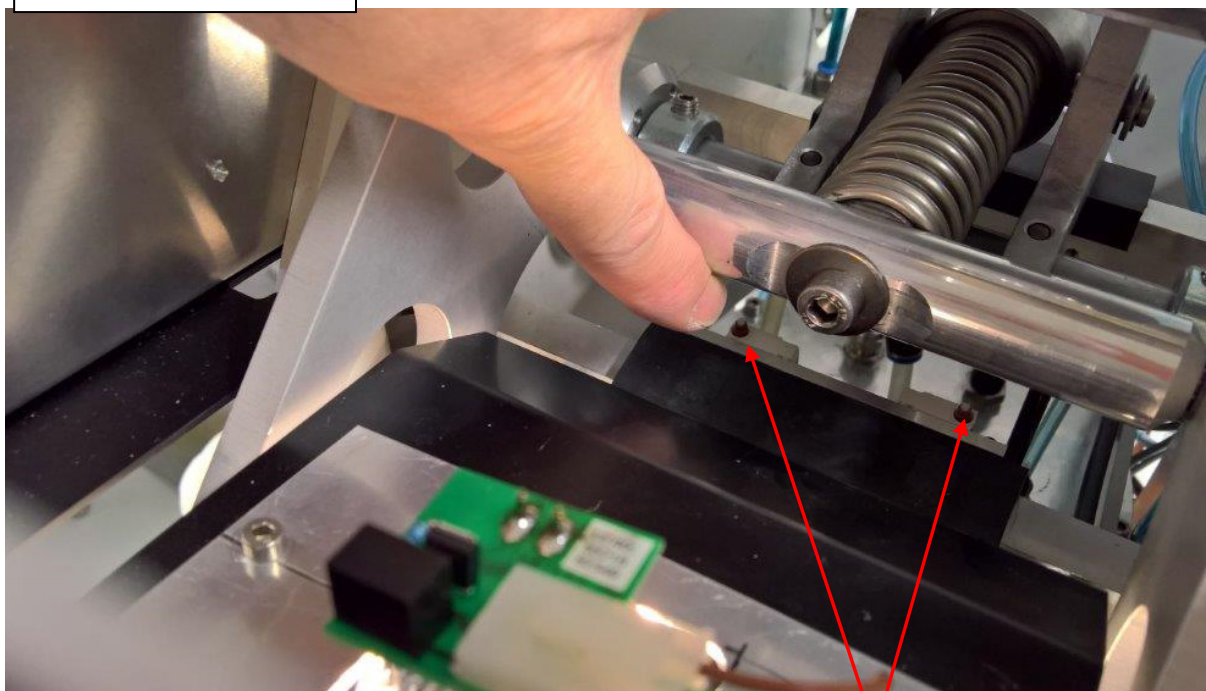

Manually activate left
and right Micro Switch

I/O pcb

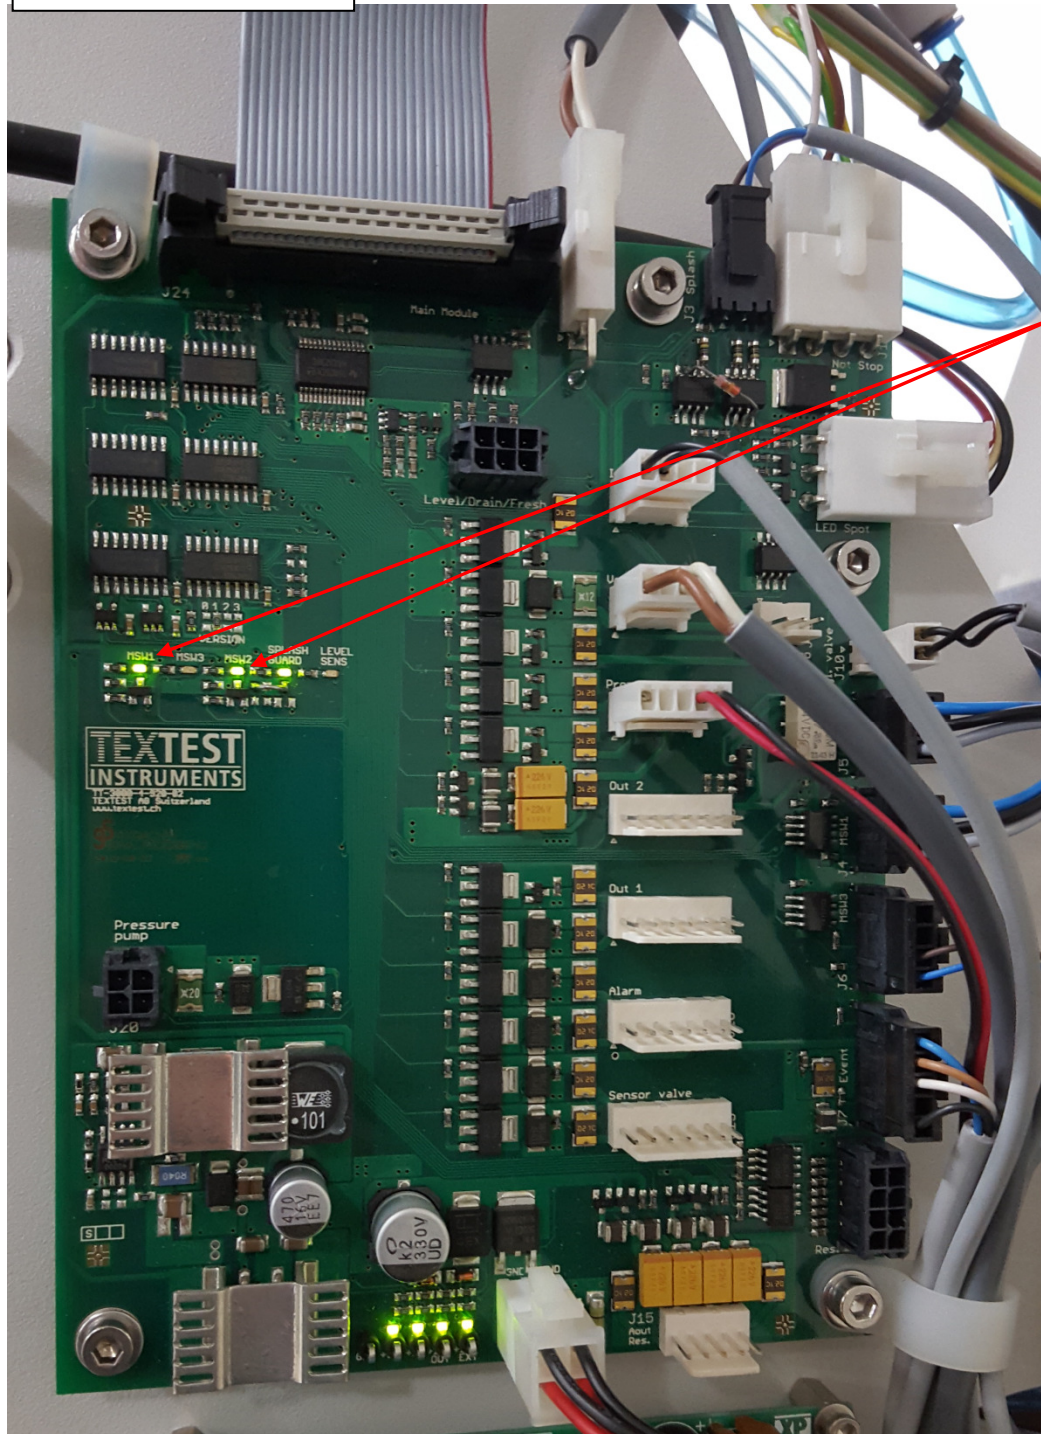

Check LED "on, off"
whilst activating Micro
Switch