



**FX 3300-IV: Mounting instructions for
TT 3300-4-300/131-133,147-149, Seal kit**
10/2017, NF


1. Disconnect the instrument from power line.
2. Remove both right-hand side panels
3. Remove both mounting screws from the light sensor device

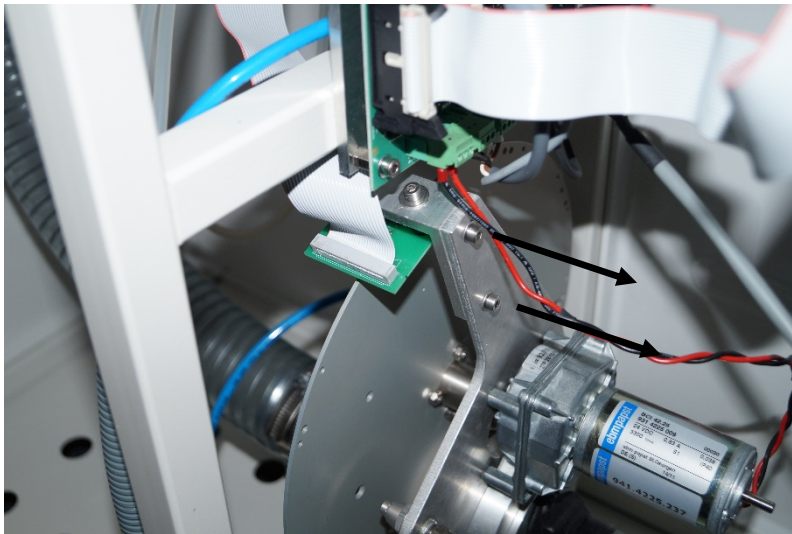


4. Remove 3 mounting screws from the orifice device

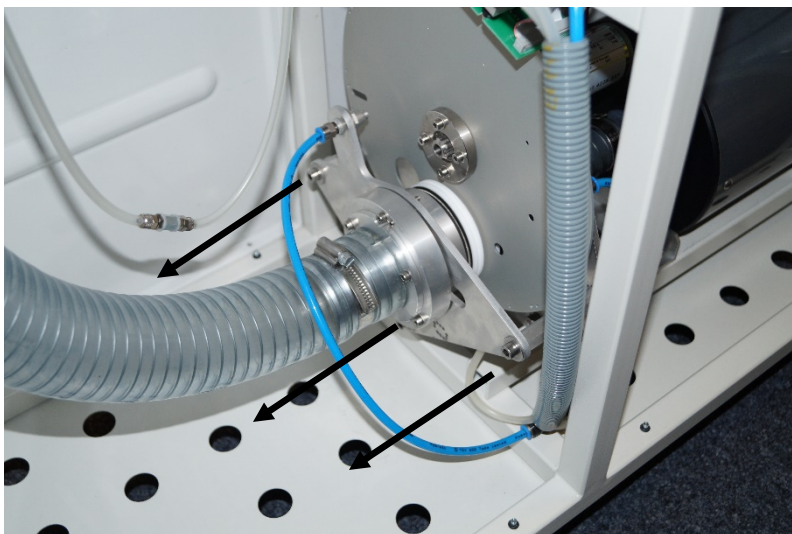

5. Remove the orifice device and the orifice disk

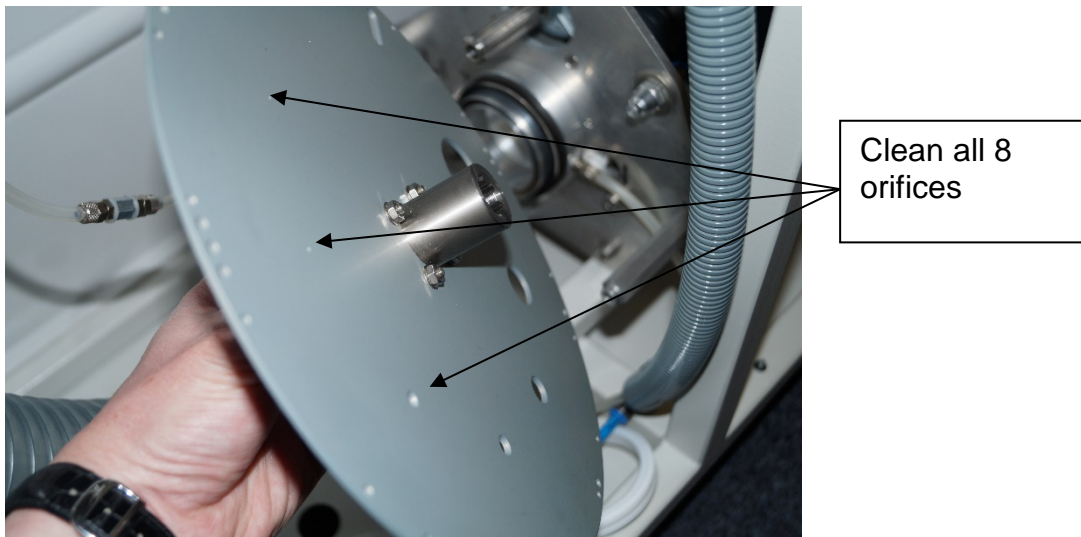

6. Clean the orifice disk with a soft cloth and Acetone. **Important:** Clean all 8 orifices with clean compressed air
7. Install the springs on the new seal ring as shown below

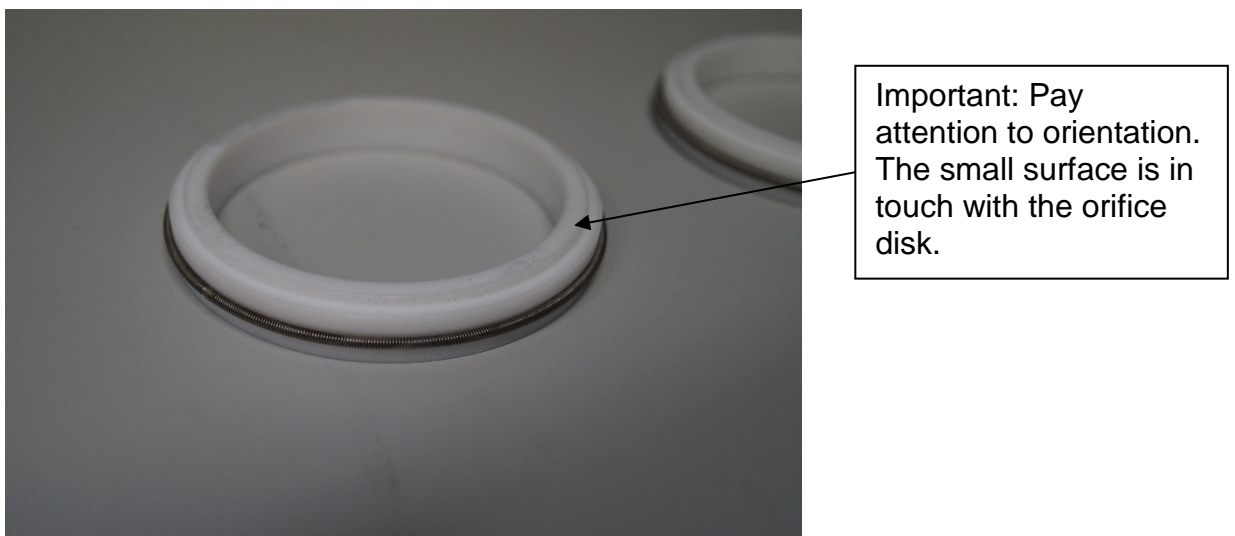

8. Install all parts in reverse order

9. Slide both springs into position on black v-gaskets

