



FX 3300-IV display problem with computer module


1. Remove the top cover (6 screws)
2. Remove the mounting screws for the pcb holder

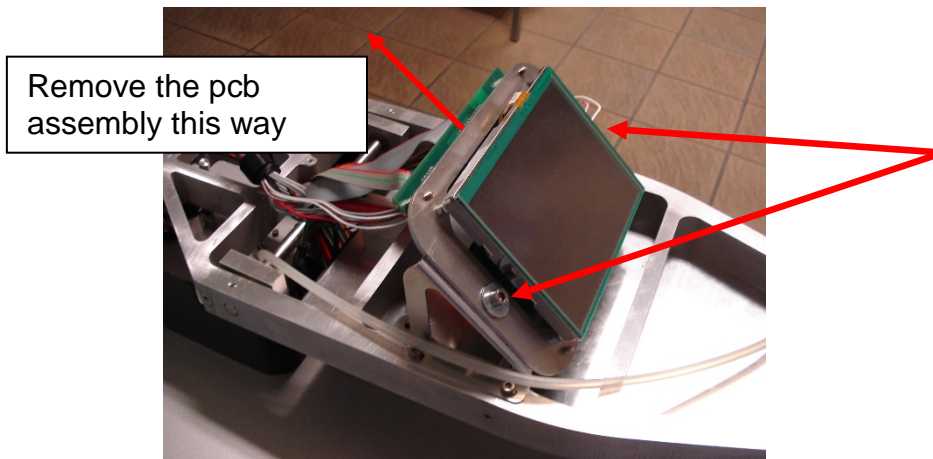


3. Remove the pcb assembly and turn it upside down
4. Flip both retainers holding the computer module

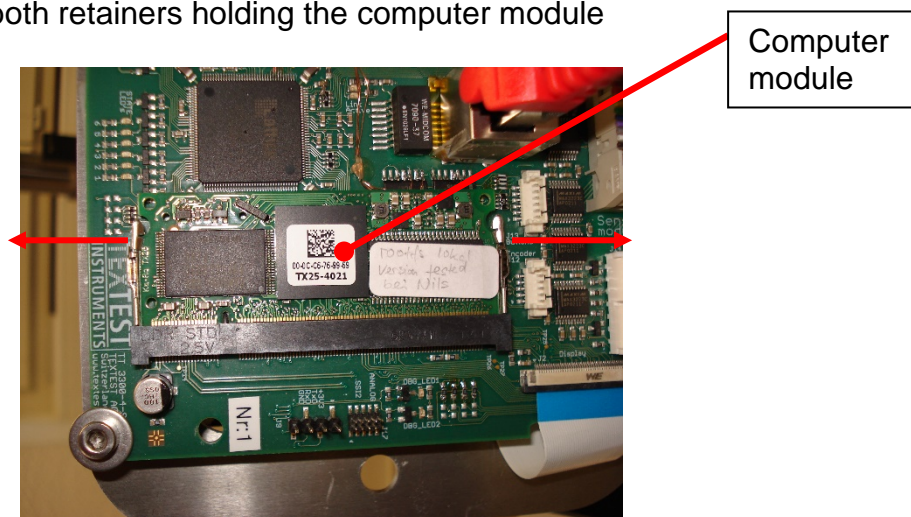


5. Swivel out the computer module and push it gently against the socket

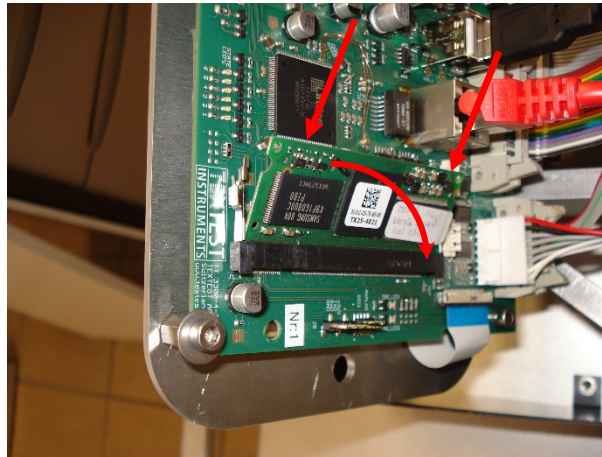


6. Swivel back the computer module. Make sure the retainer snap in properly.
7. Check the display. In case the display still is not working properly, check the contact of the white flat belt cable:

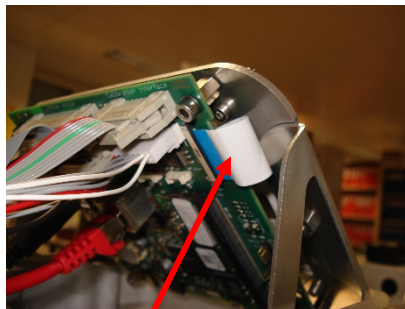

Flat belt
cable

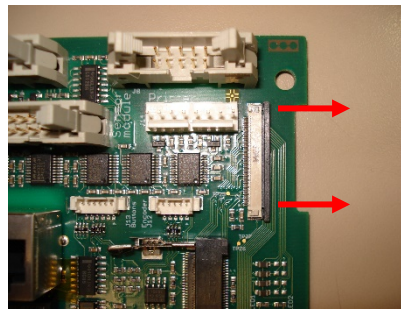

On the pcb side, unlock the connector and check whether the flat belt cable is inserted properly.

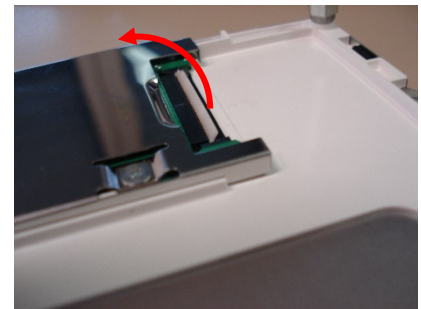

On the display side, unlock the connector and check whether the flat belt cable is inserted properly.