


FX 3000-IV Touch Screen Calibration

The calibration data of the touch display is stored in a permanent memory on the main PCB. In case the touch display is replaced, the touch display needs to be re-calibrated.


In the menu *Settings* select *Touch Screen Calibration*.

Now a red reticule appears in the upper left corner of the display. Touch the reticule with a pointed object, e.g. a pencil. Make sure that you touch the reticule precisely in the center. Then the reticule appears in the upper right, lower right, lower left corner and finally in the center of the display. Touch all appearing reticules as described.

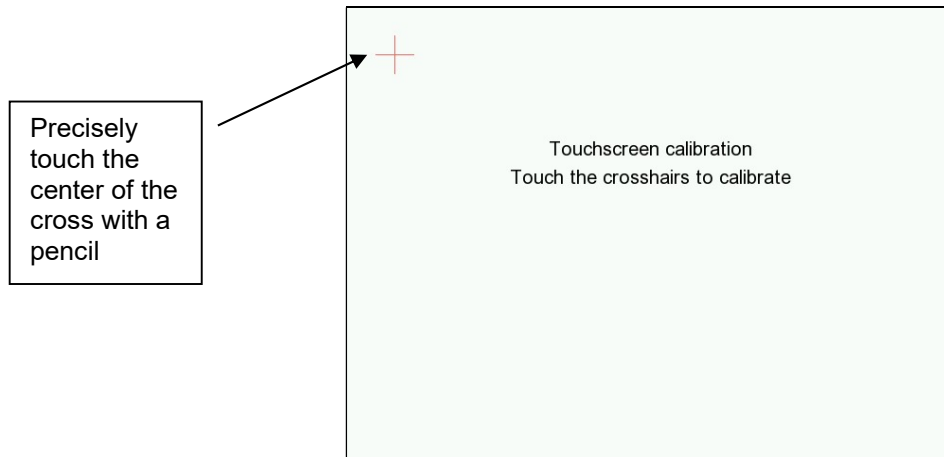


In case the touch display has not been calibrated properly, it may be that the menu *Settings* / *Touch Screen Calibration* can't be selected anymore.

In this case you can restart the touch calibration by activating the push button on the main PCB. The main PCB is mounted underneath the panel on the left side of the instrument.

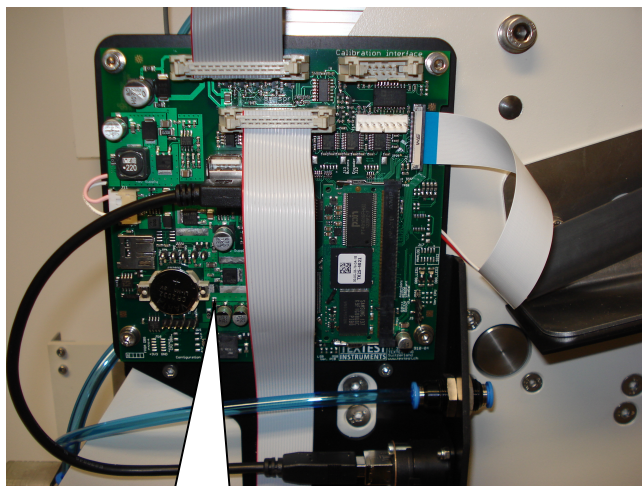

Main PCB, located underneath the panel on the left side of the instrument

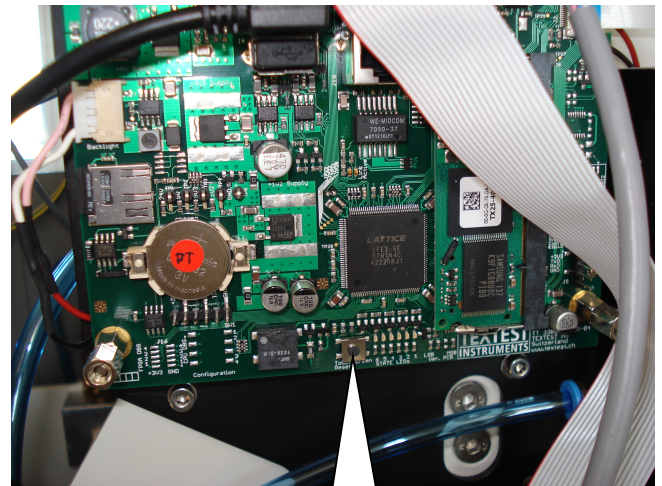

Push button for touch screen reset