


## FX 3300-IV: How to install and configure WIFI

07/2020, NF

If you have purchased the instrument with the option FX 3300-WLN 2, you may skip step 1.

- 1.) Install the WIFI stick. The WIFI stick should be removed from the main board as otherwise interferences may appear.

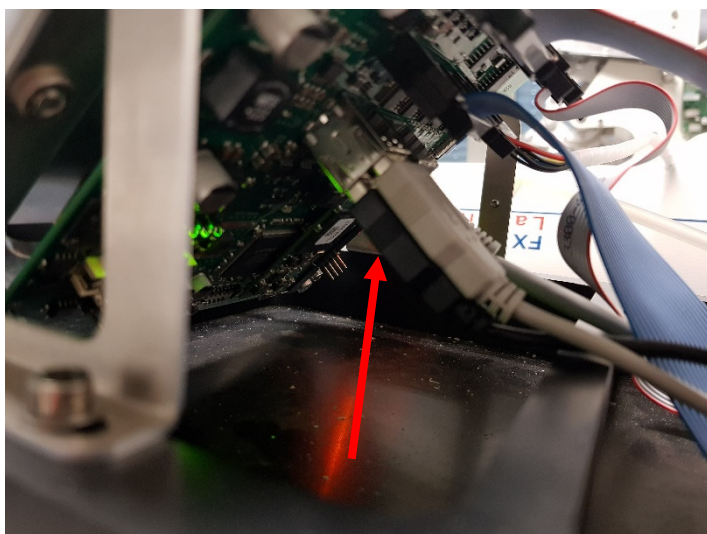

Connect the USB cable with the main board




Install the end of the USB cable below the front test head (use a cable binder)




This is it!

- 2.) Open the menu "Settings => Network": Switch to WIFI mode. The LAN port is now deactivated.

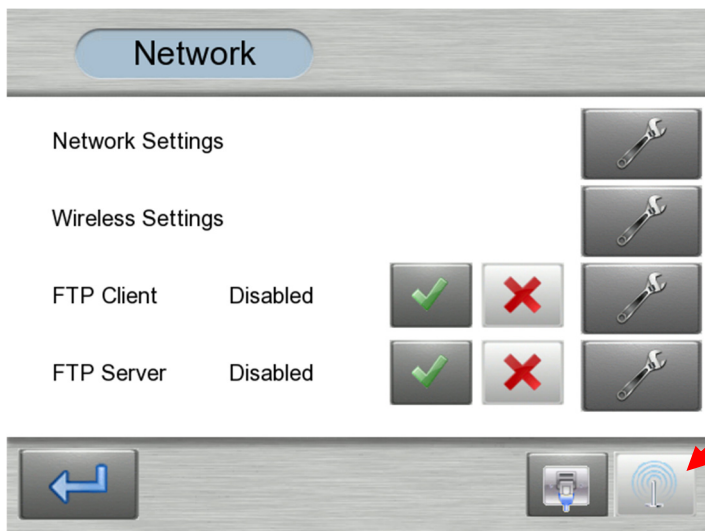


- 3.) Select "Wireless Settings". The instrument will now scan for available networks.

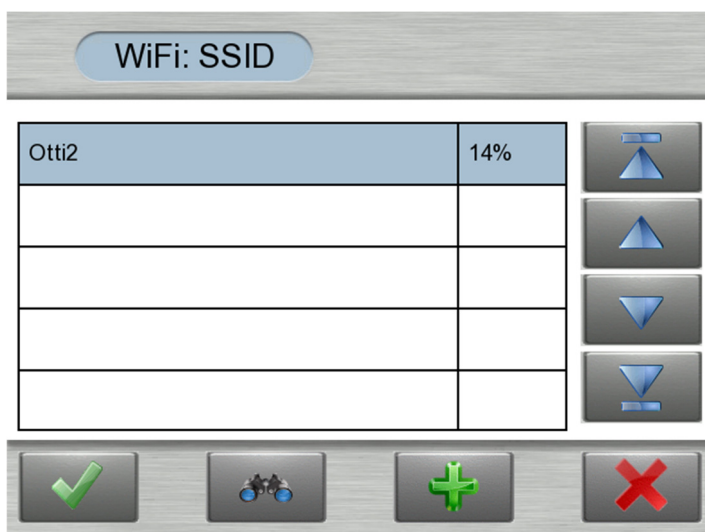

Select the desired SSID of your network and confirm.


4.) Now you can enter your settings of your WIFI network.

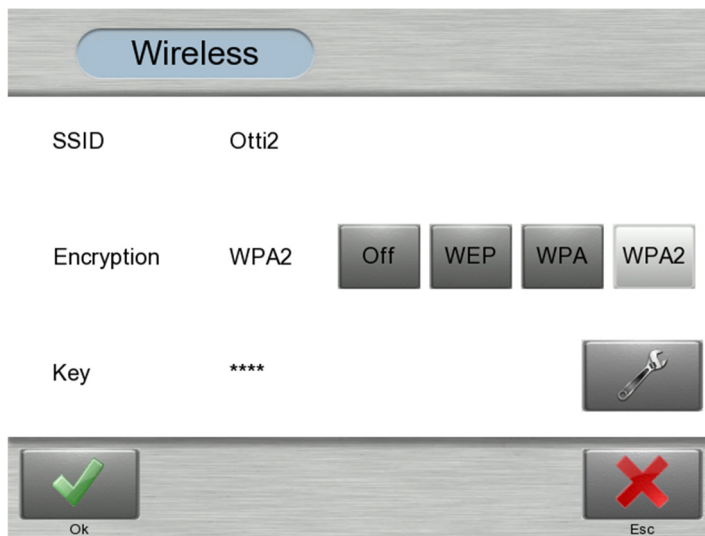

5.) Enter the IP address of your instrument. This step may require some assistance from your network supervisor. The following picture shows a simply setup (note the last digit of IP address):



6.) Once everything is correct, the instrument should indicate connection here:

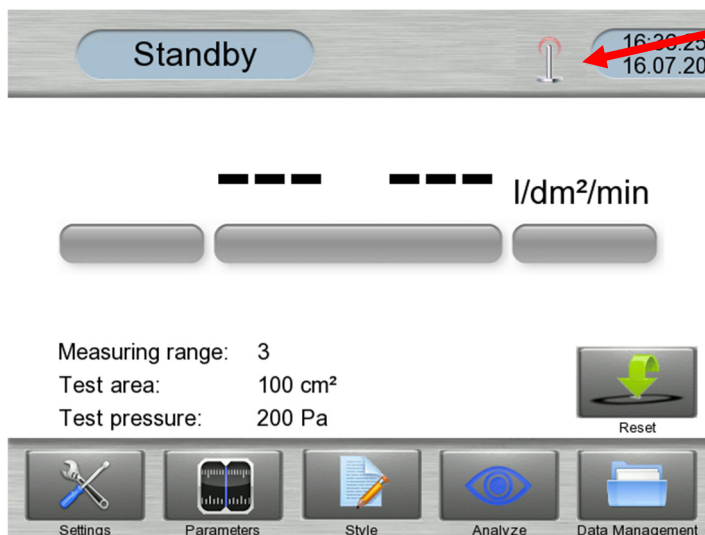

7.) Launch a web browser and enter the IP address of the instrument as URL. This opens the menu of the evaluation software FX 3300-IV EVA.