

Part 1, English => für Deutsch, siehe Teil 2

FX 3300-IV: How to download logfile and basic style data 23.07.2018, NF

1. Connect with the instrument and launch your web browser. Important: Login as «Supervisor». The password is equal to the login password on the instrument.

TEXTTEST
INSTRUMENTS

Measure Style Logs Help Configuration **Login**

Login

Enter password

Login

Last Update 2018-02-20 info@textest.ch © 2018 Textest AG

2. Open the menu „Style“ and select the function “Export”

TEXTTEST
INSTRUMENTS

Measure **Style** Logs Help Configuration Logout

Style


| Style name | Edit |
|------------------------------------|------|
| <input type="checkbox"/> 05TH60WPE | |
| <input type="checkbox"/> 2430PP | |
| <input type="checkbox"/> Airbag | |
| <input type="checkbox"/> Friday | |
| <input type="checkbox"/> GR73PE | |
| <input type="checkbox"/> GR73PP | |
| <input type="checkbox"/> HR989PP | |
| <input type="checkbox"/> JKKC | |
| <input type="checkbox"/> MFP2 | |
| <input type="checkbox"/> RC10 | |

New **Delete** **Delete all**

Import Styles from PC to Instrument Keine Datei ausgewählt. **Send**

Export Styles from Instrument to PC **Export**

3. Now you should be asked how to proceed with the data. Chose «Save data». The data file will now be saved in the download directory of Windows.

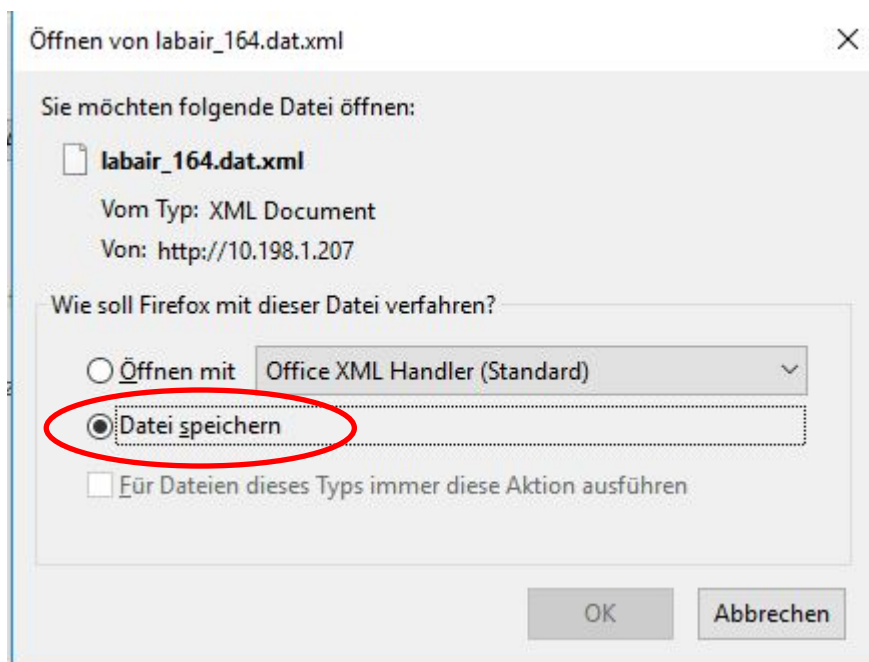


4. Open the menu „Logs“ and select „save“.

Logs


```
Dec 10 16:29:29 (none) local0.info fx3300_IV: data_load_sensor_calib: sensor calibration cp = 1.003497
Dec 10 16:29:29 (none) local0.info fx3300_IV: data_setSensorOffset: offset tp: 309.331, odp: 309.103, cp: 618.940
Dec 10 16:29:29 (none) local0.debug fx3300_IV: new_command_obj: object created @ 0x131c8f0, size:16528 (cmds@0x12e2fa8,
params@0x1320940, data@0x131c938)
Dec 10 16:29:29 (none) local0.debug fx3300_IV: resize_command_obj: pool resized to 11 cmds (@ 0x1320998)
Dec 10 16:29:29 (none) local0.debug fx3300_IV: resize_command_obj: pool resized to 20 params (@ 0x1320a20)
Dec 10 16:29:29 (none) local0.debug fx3300_IV: resize_command_obj: pool resized to 30 params (@ 0x1320a20)
Dec 10 16:29:29 (none) local0.debug fx3300_IV: resize_command_obj: pool resized to 40 params (@ 0x1320a20)
Dec 10 16:29:29 (none) local0.debug fx3300_IV: release_command_obj: destroyed @ 0x131c8f0
Dec 10 16:29:30 (none) local0.info fx3300_IV: label_allocate: new label file allocated.
Dec 10 16:29:38 (none) local0.info fx3300_IV: main: sdcard available.
Dec 10 16:29:38 (none) local0.info fx3300_IV: accept_connection_gui: GUI connected
Dec 10 16:29:38 (none) local0.info fx3300_IV: accept_connection_thp: THP connected
Dec 10 16:29:38 (none) local0.info fx3300_IV: data_setSensorOffset: offset tp: -28.699, odp: -44.926, cp: -28.811
Dec 10 16:29:38 (none) local0.info fx3300_IV: zeroTest: Machine in range.
Dec 10 16:29:38 (none) local0.info fx3300_IV: wifi_coldplug_check: 'Coldplug wifi stick check' has found a wifi stick
Dec 10 16:29:38 (none) local0.info fx3300_IV: network_wifi_init: MAC address of wifi device BC:30:7E:AD:CC:39
Dec 10 16:29:38 (none) local0.info fx3300_IV: setIpAndGw: Network settings: IP = 10.198.1.208, Subnet = 255.255.255.0
Dec 10 16:29:38 (none) local0.warn fx3300_IV: gui_standby_sm: Unexpected ctrl message 260
Dec 10 16:29:48 (none) local0.info fx3300_IV: setup_set_lang: New language: English.
Dec 10 16:29:48 (none) local0.info fx3300_IV: label_allocate: new label file allocated.
Dec 10 16:29:49 (none) local0.info fx3300_IV: store_cfg: Backup of configuration successful.
Dec 10 16:31:12 (none) local0.err fx3300_IV: FPGA error: Bit 2: DC motor driver: Over current or over temperature.
Dec 10 17:22:53 (none) user.info kernel: fec 2188000.ethernet eth0: Link is Up - 100Mbps/Full - flow control rx/tx
Dec 10 17:23:09 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Dec 10 17:23:30 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Dec 10 17:24:30 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Dec 10 17:24:32 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Dec 10 17:24:33 (none) local0.info fx3300_IV: webengine_su: Super user login successful (IP=10.198.1.103).
Dec 10 17:24:33 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Dec 10 17:24:34 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
```

Save

5. Now you should be asked how to proceed with the data. Chose «Save data». The data file will now be saved in the download directory of Windows.

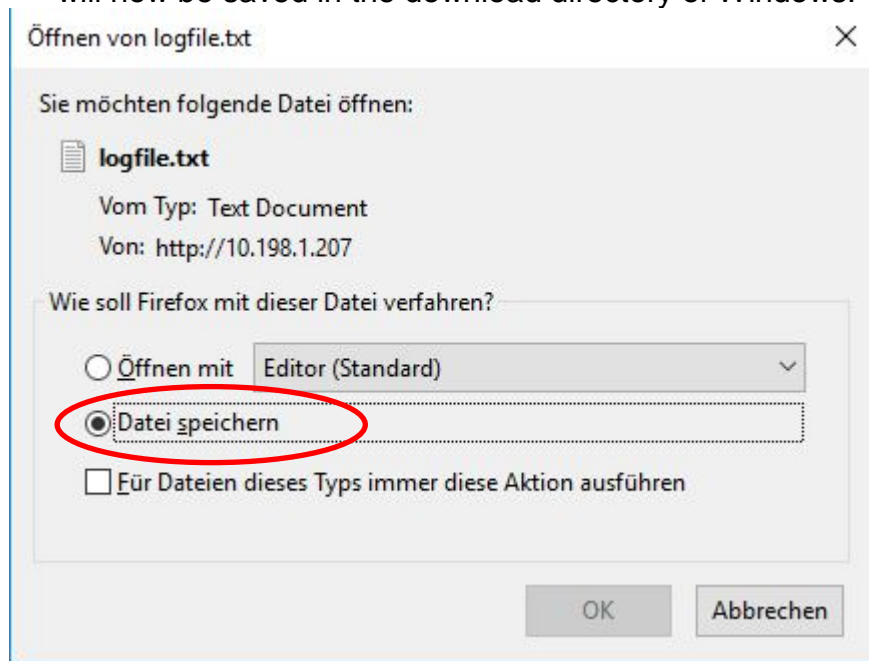


6. Open the download directory, you should now find both data files:

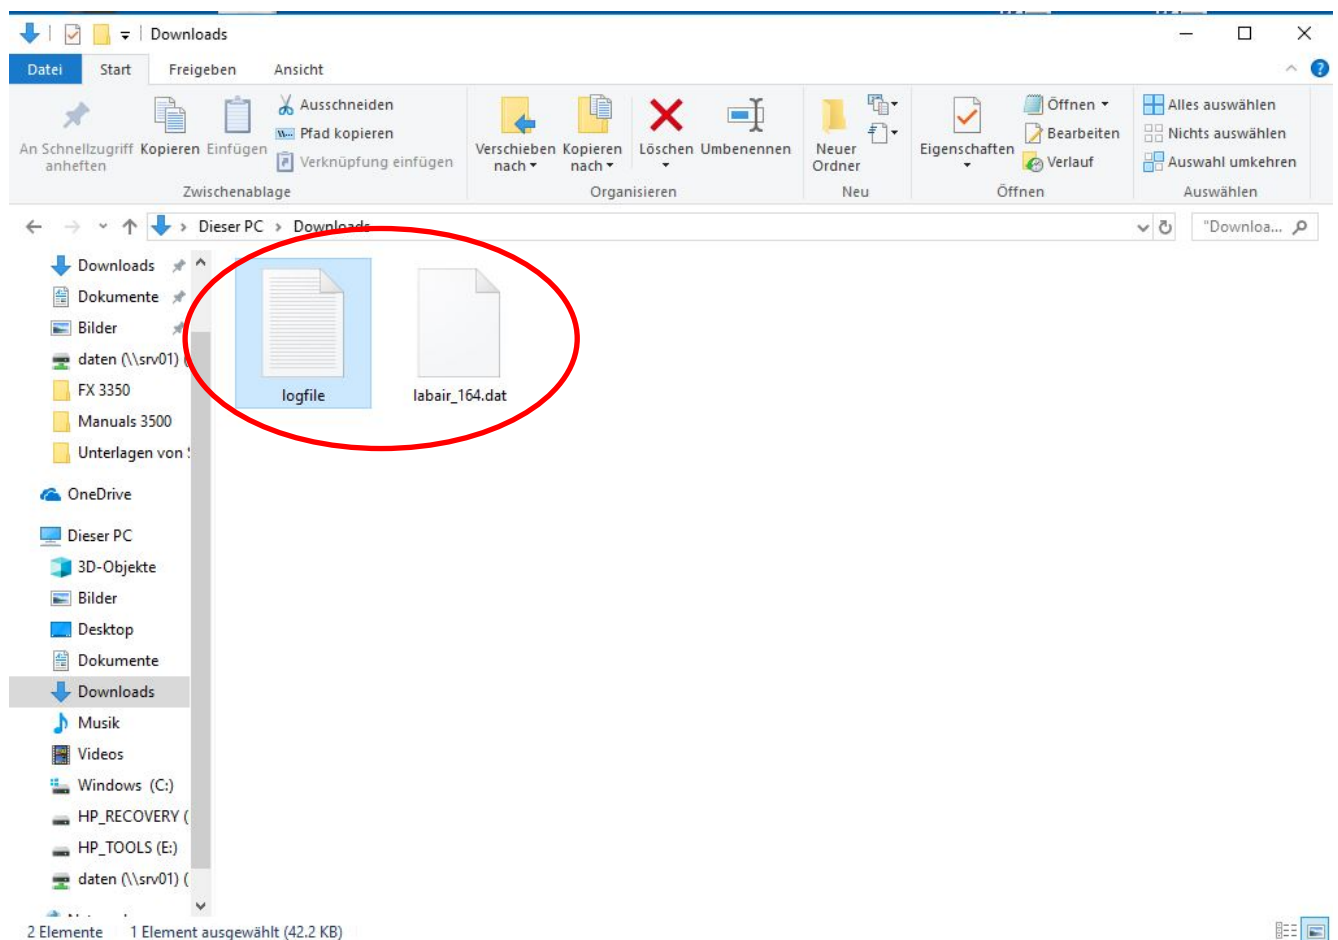


Deutsch:

FX 3300-IV: Wie man den Artikelstamm mit den Logdateien herunterladen kann 23.07.2018, NF


1. Verbinden Sie sich mit dem Gerät und öffnen Sie mit einem Webbrowser den Geräteinternen Webserver. Wichtig: Melden Sie sich zuerst als Supervisor mit „Login“ an. Das Passwort ist identisch mit dem Supervisor-Passwort vom Gerät.

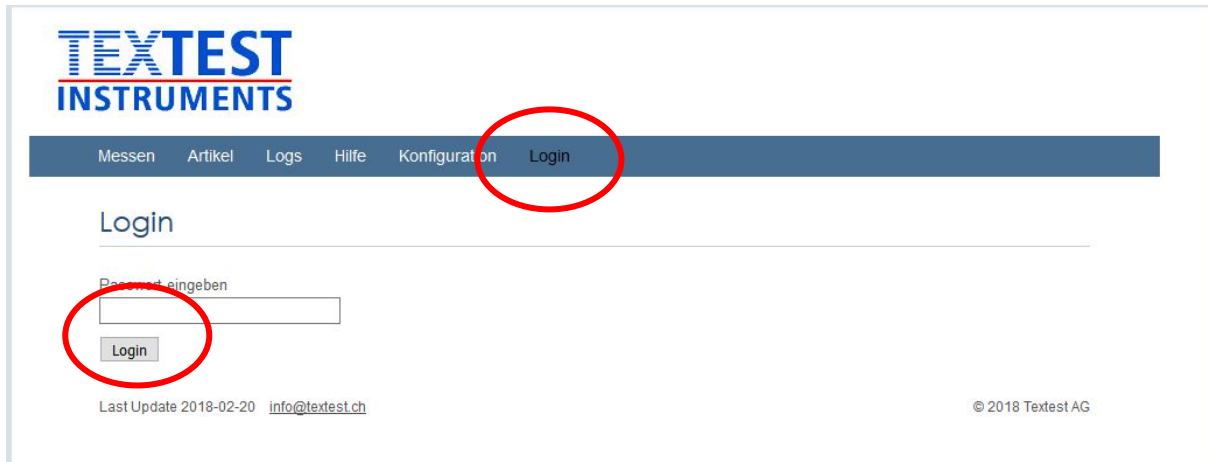

2. Gehen Sie in das Menü „Artikel“ und führen Sie die Exportfunktion aus.

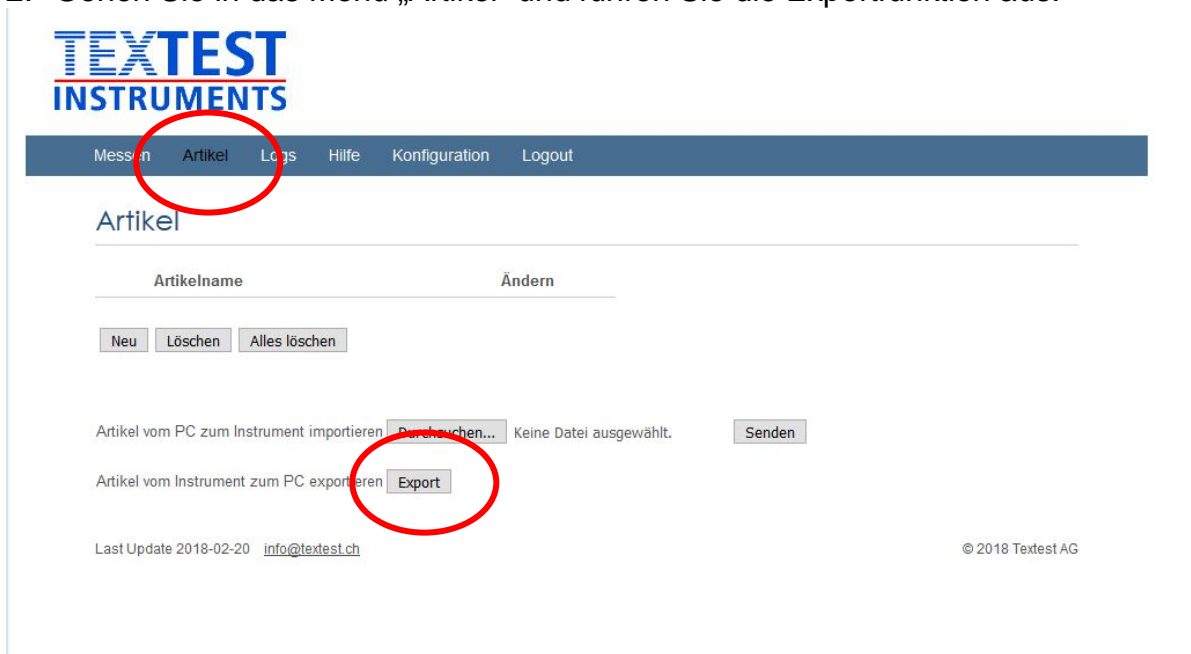

3. Sie sollten angefragt werden, wie mit dieser Datei verfahren werden soll. Wählen Sie „Datei speichern“. Die Datei wird nun im Download-Verzeichnis von Windows abgespeichert

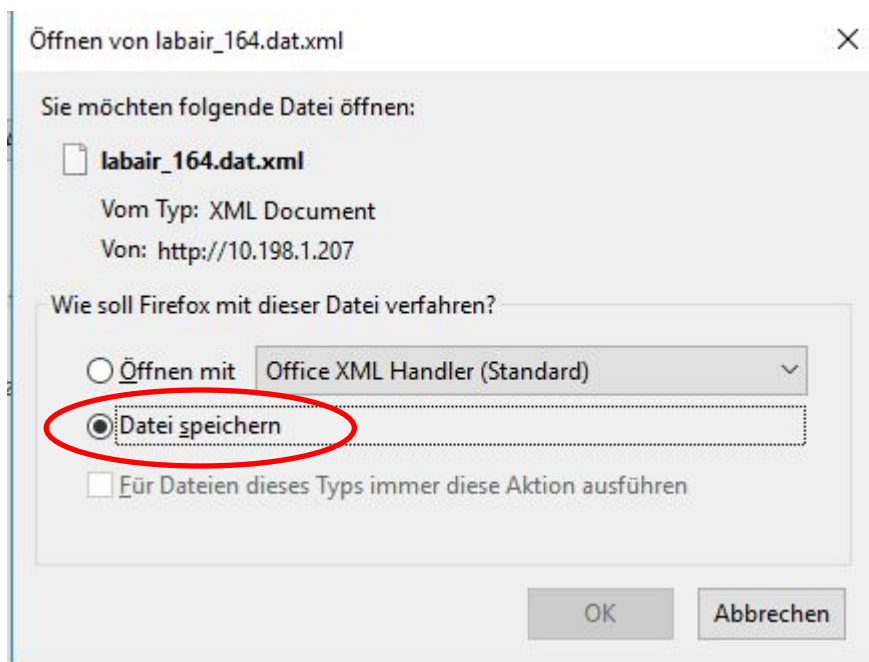

4. Gehen Sie nun in das Menü „Logs“ und führen Sie die „Speichern“ durch.

TEXTTEST INSTRUMENTS


Messen Artikel **Logs** Hilfe Konfiguration Logout

Logs

Jul 23 15:13:18 (none) user.info kernel: wlan0: authenticate with 90:ef:68:7d:2d:1c
Jul 23 15:13:19 (none) user.info kernel: wlan0: send auth to 90:ef:68:7d:2d:1c (try 1/3)
Jul 23 15:13:19 (none) user.info kernel: wlan0: authenticated
Jul 23 15:13:19 (none) user.info kernel: wlan0: associate with 90:ef:68:7d:2d:1c (try 1/3)
Jul 23 15:13:19 (none) user.info kernel: wlan0: RX AssocResp from 90:ef:68:7d:2d:1c (capab=0x431 status=0 aid=4)
Jul 23 15:13:19 (none) user.info kernel: wlan0: associated
Jul 23 15:13:19 (none) user.info kernel: cfg80211: Calling CRDA for country: CH
Jul 23 15:13:19 (none) user.debug kernel: ath: EEPROM regdomain: 0x82f4
Jul 23 15:13:19 (none) user.debug kernel: ath: EEPROM indicates we should expect a country code
Jul 23 15:13:19 (none) user.debug kernel: ath: doing EEPROM country->regdmn map search
Jul 23 15:13:19 (none) user.debug kernel: ath: country maps to regdmn code: 0x37
Jul 23 15:13:19 (none) user.debug kernel: ath: Country alpha2 being used: CH
Jul 23 15:13:19 (none) user.debug kernel: ath: Regpair used: 0x37
Jul 23 15:13:19 (none) user.debug kernel: ath: regdomain 0x82f4 dynamically updated by country IE
Jul 23 15:13:19 (none) user.info kernel: cfg80211: Regulatory domain changed to country: CH
Jul 23 15:13:19 (none) user.info kernel: cfg80211: DFS Master region: ETSI
Jul 23 15:13:19 (none) user.info kernel: cfg80211: (start_freq - end_freq @ bandwidth), (max_antenna_gain, max_eirp), (dfs_cac_time)
Jul 23 15:13:19 (none) user.info kernel: cfg80211: (2402000 KHz - 2482000 KHz @ 40000 KHz), (2000 mBi, 0 mBm), (N/A)
Jul 23 15:13:19 (none) user.info kernel: cfg80211: (5170000 KHz - 5250000 KHz @ 80000 KHz), (2000 mBi, 0 mBm), (N/A)
Jul 23 15:13:19 (none) user.info kernel: cfg80211: (5250000 KHz - 5330000 KHz @ 80000 KHz, 160000 KHz AUTO), (2000 mBi, 0 mBm), (N/A)
Jul 23 15:13:19 (none) user.info kernel: cfg80211: (5490000 KHz - 5710000 KHz @ 160000 KHz), (2700 mBi, 0 mBm), (N/A)
Jul 23 15:13:19 (none) user.info kernel: cfg80211: (57000000 KHz - 66000000 KHz @ 2160000 KHz), (4000 mBi, 0 mBm), (N/A)
Jul 23 15:15:35 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Jul 23 15:15:35 (none) local0.warn fx3300_IV: webengine: Link handler for link '/favicon.ico' not defined.
Jul 23 15:15:44 (none) local0.info fx3300_IV: webengine_su: Service user login successful (IP=10.198.1.100).
Jul 23 15:19:10 (none) local0.info fx3300_IV: Style file '/fx3300/data/fx3300.dat.xml' not available
Jul 23 15:19:10 (none) local0.debug fx3300_IV: setup_set_m_config: Measure configuration: setp: 200.000000, unit: 0, area: 20.00 cm2.
Jul 23 15:19:11 (none) local0.info fx3300_IV: store_cfg: Backup of configuration successful.
Jul 23 15:23:58 (none) local0.info fx3300_IV: removeSuperUser: Super user logout (IP=10.198.1.100).
Jul 23 15:24:00 (none) local0.info fx3300_IV: webengine_su: Service user login successful (IP=10.198.1.100).

Speichern

5. Sie sollten angefragt werden, wie mit dieser Datei verfahren werden soll. Wählen Sie „Datei speichern“. Die Datei wird nun im Download-Verzeichnis von Windows abgespeichert

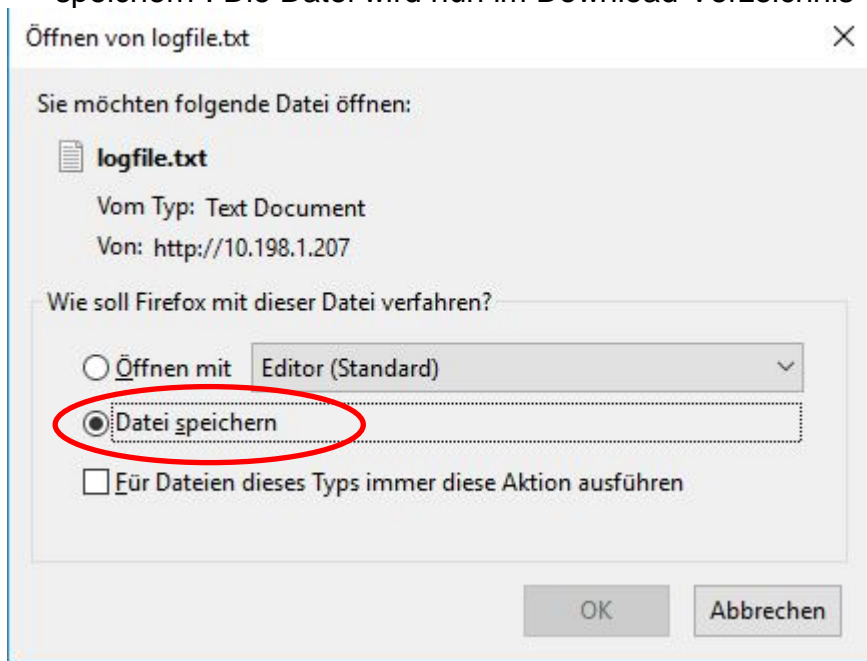

6. Öffnen Sie nun das Downloadverzeichnis von Windows, wo sich Ihre beiden Dateien befinden:

