


## DRK113-4 Corrugated Fiberboard Adhesive Strength Test Clamp

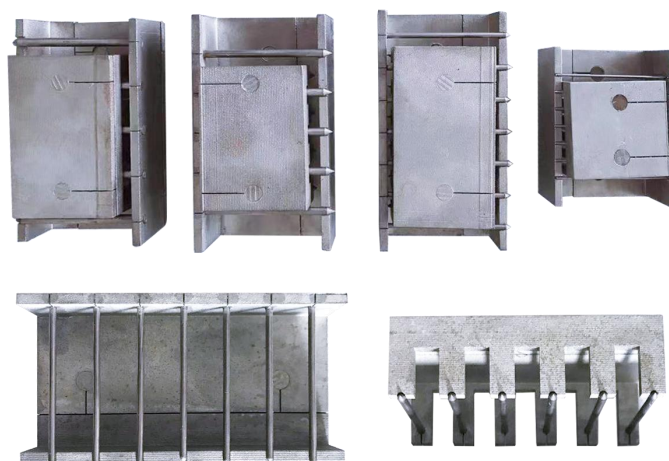

### Product introduction

The instrument is designed and manufactured according to various technical indicators of national standard GB/T6548-1998 <<measurement of corrugated cardboard bonding strength >>

### Product feature

Nice appearance, compact structure and reasonable, easy to use.

### Product application

The instrument is used to cut the sample for corrugated cardboard adhesive strength test, it is special instrument for cardboard sample, it is also optional tools for DRK113 crush tester.

### Technical standard

The instrument consists of bracket, detacher, long and short needle.

The principle for insert sample interval of long and short stitches relative vertical motion, make the surface paper and paper needed for the complete separation of power,

The instrument conforms to GB/T 6548

### Product parameter

- 1、bracket's upper and down parallel:  $\leq 0.10$
- 2、clamp's upper and down parallel:  $\leq 0.10$
- 3、long and short needle's straightness:  $\leq 0.10$
- 4、model A corrugated cardboard length, short needle's diameter:  $\phi 3 \pm 0.10$
- 5、model C、B corrugated cardboard length, short needle's diameter:  $\phi 2 \pm 0.05$

## Product configuration

A set of clamp(A/B/C)